



ASSEMBLY GUIDE: LUGGAGE RACK REAR LIGHT KIT

Version 1.0



Installation of the Gocycle Luggage Rack Rear Light



CONTENTS

1. Cable Installation	2
2. Rear Light Installation	4




OVERVIEW

This assembly guide details installation of the Luggage Rack Rear Light Kit. This can only be utilised if the [G2 Integrated Lighting Kit](#) as well as the Rear Luggage Rack is already installed on the G2. If you have any questions, or require any further assistance, please contact techsupport@gocycle.com.

PARTS LIST

To successfully complete the procedure you will require the following parts:

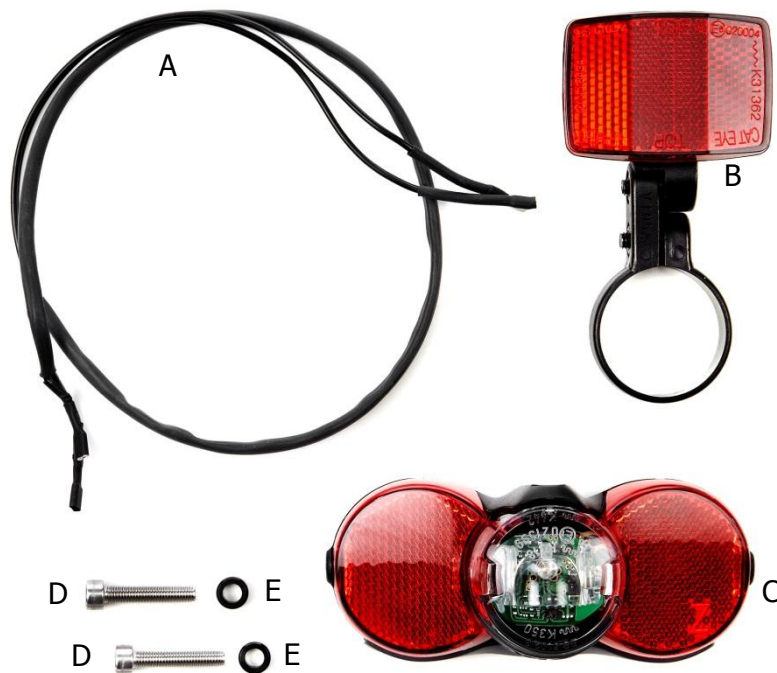

	Part Code	Part Description	Quantity
A	4100	Rear Light Cable Extension	1
B	578	Red Reflector w/ 34.9 bracket	1
C	4099	Luggage Rack Rear Light	1
D	2167	M5 x 25 SH SS A4	2
E	2409	Spacer	2

TOOL LIST

To successfully complete this procedure you will require the following tools. *You can purchase special KKL tools by their tool number detailed below.*

Part Code	Tool Description
4064	4mm Allen Key Chrome



1. CABLE INSTALLATION



1.1. Remove the end cap from the luggage rack as shown.



1.2. Insert the rear light extension (A) into the luggage rack as shown. Ensure to insert the spade connector ends into the luggage rack.



1.3. Push the cable down the inner tube of the luggage rack until the ends exit the left hand side as demonstrated.




1.4. Plug the connectors to the existing G2 Integrated Light Kit as shown. Note: Check the polarity! Cables with white marks should be connected together. Plain black cables should be connected together.



Rear Light Kit cable installed.



2. REAR LIGHT INSTALLATION

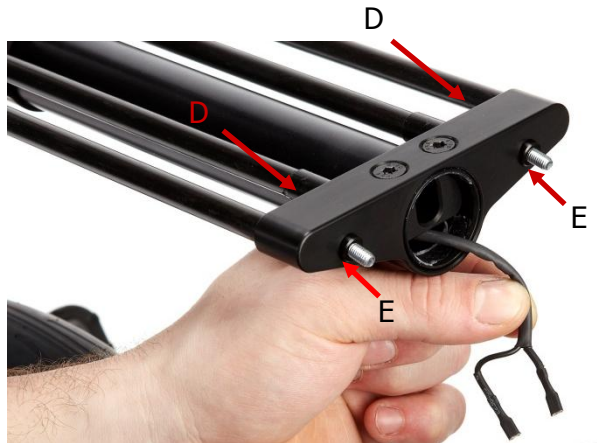

2.1. Install the two M5 x 25 Caphead bolts (D) into the rear luggage rack. Also install the two spacers (E) as demonstrated.

2.2. Plug the rear light extension cable into the rear light as shown. Note the orientation of the positive and negative terminals.

Positive denoted by a "lightning bolt" symbol.

Negative denoted by 'earth' symbol

2.3. Align the rear light as demonstrated and using the 4mm Allen key tighten the two bolts.



2.4. Finally install the red reflector as demonstrated.

Completed assembly.

**IMPORTANT NOTE: THE ABOVE ASSEMBLY STEPS MUST BE CARRIED OUT IN ORDER.
FAILING TO DO SO MAY RESULT IN DAMAGE TO THE GOCYCLE.**

If you have any further queries or comments, please contact Gocycle Technical Support:

techsupport@gocycle.com